

EXHIBIT 1



3955680



AUTOMATIC WASHER WITH CALYPSO® WASH MOTION

Use & Care Guide

For questions about features, operation/performance,
parts, accessories or service call: 1-800-253-1301
In Canada, for assistance call: 1-800-481-5881,
for installation and service call: 1-800-807-6777
or visit our website at
www.whirlpool.com or www.whirlpool.ca

LAVADORA AUTOMÁTICA CON MOVIMIENTO DE LAVADO CALYPSO®

Manual de Uso y Cuidado

Para consultas respecto a características, operación/desempeño,
partes, accesorios o servicio técnico, llame al 1-800-253-1301.
En Canadá, para obtener asistencia llame al 1-800-481-5881,
para la instalación y servicio llame al 1-800-807-6777
o visite nuestra página de internet
www.whirlpool.com o www.whirlpool.ca

LAVEUSE AUTOMATIQUE À MOUVEMENT DE LAVAGE CALYPSO®

Guide d'utilisation et d'entretien

Pour des questions à propos des caractéristiques, du fonctionnement/ de
la performance, des pièces, des accessoires ou du service,
composez le 1-800-253-1301.

Pour assistance au Canada, composez le 1-800-481-5881,
pour installation et service, composez le 1-800-807-6777
ou visitez notre site Internet à
www.whirlpool.com ou www.whirlpool.ca

Table of Contents/Index/Table des matières... 2



BEST AVAILABLE COPY

TABLE OF CONTENTS

| | | | |
|----------------------------|----|------------------------------------|----|
| WASHER SAFETY | 3 | Pausing or Restarting | 12 |
| INSTALLATION REQUIREMENTS | 4 | Changing Cycles and Options | 12 |
| Tools and Parts | 4 | Cycles | 12 |
| Location Requirements | 4 | What Happens in a Wash Cycle | 13 |
| Drain System | 5 | Options | 14 |
| Electrical Requirements | 6 | LAUNDRY TIPS | 16 |
| INSTALLATION INSTRUCTIONS | 7 | Loading | 16 |
| Install Leveling Feet | 7 | WASHER CARE | 17 |
| Connect Drain Hose | 7 | Cleaning Your Washer | 17 |
| Connect Inlet Hoses | 8 | Water Inlet Hoses | 17 |
| Secure Drain Hose | 8 | Vacation, Storage, and Moving Care | 17 |
| Level Washer | 8 | TROUBLESHOOTING | 18 |
| Complete Installation | 9 | LID INSTRUCTIONS | 21 |
| FEATURES AND BENEFITS | 10 | ASSISTANCE OR SERVICE | 22 |
| CALYPSO® Wash Motion | 10 | In the U.S.A. | 22 |
| WASHER USE | 11 | In Canada | 22 |
| Starting Your Washer | 11 | WARRANTY | 23 |
| Using the Proper Detergent | 11 | | |

ÍNDICE

| | | | |
|--|----|---|----|
| SEGURIDAD DE LA LAVADORA | 25 | Cómo detener o volver a poner en marcha | 34 |
| REQUISITOS DE INSTALACIÓN | 26 | Cambio de ciclos y opciones | 34 |
| Herramientas y partes | 26 | Ciclos | 34 |
| Requisitos de ubicación | 27 | Lo que ocurre en un ciclo de lavado | 35 |
| Sistema de desagüe | 27 | Opciones | 36 |
| Requisitos eléctricos | 28 | CONSEJOS DE LAVANDERÍA | 38 |
| INSTRUCCIONES DE INSTALACIÓN | 29 | Cómo cargar | 38 |
| Cómo instalar las patas niveladoras | 29 | CUIDADO DE LA LAVADORA | 38 |
| Cómo conectar la manguera de desagüe | 29 | Limpeza de su lavadora | 38 |
| Cómo conectar las mangueras de entrada | 30 | Mangueras de entrada de agua | 39 |
| Cómo asegurar la manguera de desagüe | 31 | Cuidado para las vacaciones, almacenaje o en caso de mudanza | 39 |
| Cómo nivelar la lavadora | 31 | SOLUCIÓN DE PROBLEMAS | 39 |
| Complete la instalación | 31 | INSTRUCCIONES DE LA TAPA | 43 |
| CARACTERÍSTICAS Y BENEFICIOS | 32 | AYUDA O SERVICIO TÉCNICO | 44 |
| Movimiento de lavado CALYPSO® | 32 | En los EE.UU. | 44 |
| USO DE LA LAVADORA | 33 | En Canadá | 44 |
| Puesta en marcha de su lavadora | 33 | GARANTÍA | 45 |
| Uso de detergente adecuado | 33 | | |

TABLE DES MATIÈRES

| | | | |
|---|----|--|----|
| SÉCURITÉ DE LA LAVEUSE | 46 | Pause ou remise en marche | 55 |
| EXIGENCES D'INSTALLATION | 47 | Changement des programmes et options | 55 |
| Outillage et pièces | 47 | Programmes | 55 |
| Exigences de l'emplacement d'installation | 47 | Ce qui se produit au cours d'un programme de lavage | 57 |
| Système de vidange | 48 | Options | 57 |
| Spécifications électriques | 48 | CONSEILS DE LESSIVAGE | 59 |
| INSTRUCTIONS D'INSTALLATION | 50 | Chargement | 59 |
| Installation des pieds de nivellement | 50 | ENTRETIEN DE LA LAVEUSE | 60 |
| Raccordement du tuyau de vidange | 50 | Nettoyage de la laveuse | 60 |
| Raccordement des tuyaux d'arrivée d'eau | 51 | Tuyaux flexibles d'alimentation de la laveuse | 60 |
| Immobilisation du tuyau de vidange | 51 | Préparation avant les vacances, un entreposage ou un déménagement | 60 |
| Réglage de l'aplomb de la laveuse | 52 | DÉPANNAGE | 61 |
| Achever l'installation | 52 | INSTRUCTIONS SOUS LE COUVERCLE | 64 |
| CARACTÉRISTIQUES ET AVANTAGES | 53 | ASSISTANCE OU SERVICE | 66 |
| Mouvement de lavage CALYPSO® | 53 | Aux États-Unis | 66 |
| UTILISATION DE LA LAVEUSE | 54 | Au Canada | 66 |
| Mise en marche de la laveuse | 54 | GARANTIE | 67 |
| Utilisation du détergent approprié | 54 | | |

Rinse

- Rinsing is accomplished in the same manner as washing. Fresh water is added to a slow spinning load. Then the load moves through the spray rinses. The water is then drained away and the rinsing process is repeated. The number of rinses varies depending on the cycle.
- During the last rinse, fabric softener is dispensed into the bottom of the tub and applied to the load.

Final Spin

- The last of the rinse water is drained and the load is spun. The amount of spinning depends on the cycle selected.

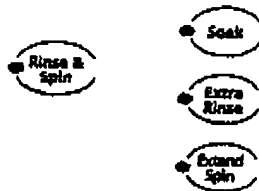
To make unloading easy, the load is peeled off the sides of the basket by the CALYPSO® wash motion.

Normal Sounds

As with any new product, you will hear sounds that you are not accustomed to. You may hear various sounds occurring during the washing, rinsing and spinning process. Between changes in wash actions, there will be momentary pauses. You will hear water spraying and splashing during the wash and rinse cycles. These new sounds and pauses are part of normal washer operation. See "Troubleshooting."

Options

Use options to customize your wash cycles.

**Rinse & Spin**

Use this option to get a combination of rinses and spins followed by a high-speed spin. The time display will include an estimate of how long it will take to fill and drain the washer. Fabric softener can be added to the Fabric Softener dispenser.

When to use Rinse & Spin

- For loads that need rinsing only.
- For completing a cycle after the power has been off.
- To add fabric softener to load.

To use or change Rinse & Spin settings:

1. Add fabric softener to the dispenser (if desired).
2. Press the RINSE & SPIN control until the RINSE & SPIN indicator light glows.
3. Press START.

Soak

Use this option for set-in stains and soil that need extra time for removal. Soaking in this washer is different than in a conventional washer. The washer sprays the load with water and detergent for 4 minutes at extra low spin speed followed by a brief period of wash action at the speed of the selected cycle. Then another 4 minutes of spraying and extra low spinning occurs. The wash action then pauses for the detergent to work on the soils. The SOAK feature is followed by the selected cycle. Using SOAK will extend your wash cycle by 16 minutes.

Extra Rinse

Selecting this option provides a second rinse with the same water temperature as selected for the first rinse. An Extra Rinse can be added to any wash cycle.

Extend Spin

This option adds an additional 3 minutes of spin to any cycle to reduce drying time and save energy. If you select EXTEND SPIN and do not select a wash cycle, you will get an 8 minute, high-speed spin.

Wash/Rinse Temp

Select a water temperature based on the type of load you are washing. Use the warmest wash water safe for fabrics. Follow garment label instructions.

Warm rinses leave the loads dryer than cold rinses. Warm rinses increase wrinkling. In cold climates, a warm rinse makes the load more comfortable to handle. Cold rinses save energy.

Temperature Guide

| Wash Water Temperature | Suggested Fabrics |
|------------------------|--|
| HOT | Whites and pastels Heavy soils |
| WARM | Bright colors Moderate to light soils |
| COLD | Colors that bleed or fade Light soils |

In wash water temperatures colder than 60°F (15.5°C), detergents do not dissolve well. Soils may be difficult to remove.